



AquaSystems®

AS-35005 — Complete Sink Replacement Kit


KIT INCLUDES:

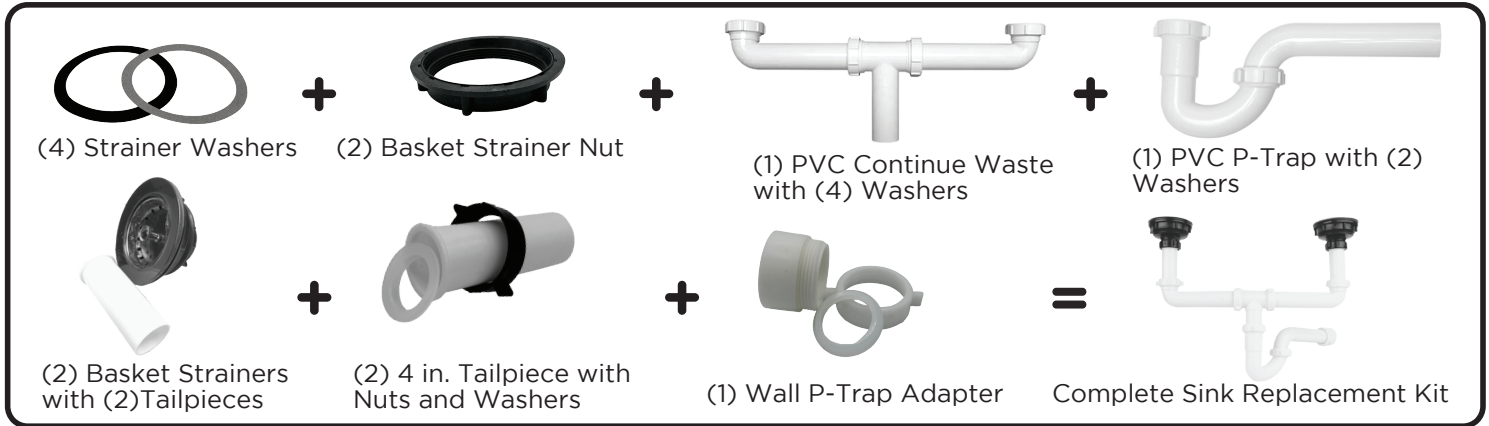


Installation Instructions:

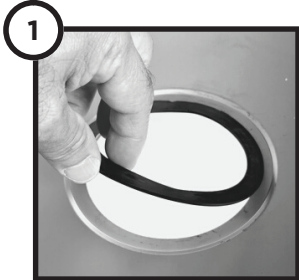


1 Set basin strainer washers on sink holes

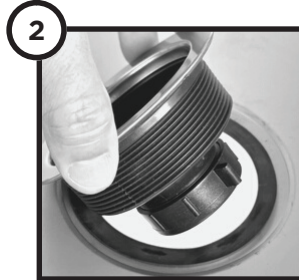


2 Once strainer washers are firmly in place, insert basket strainers into sink holes

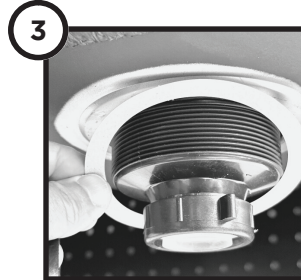


3 Place additional strainer washers below sink

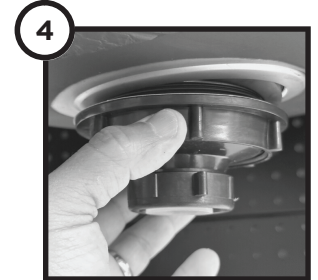


4 Carefully tighten basket strainer nuts in place

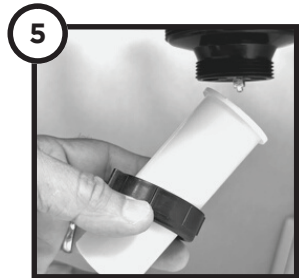


5 Insert 4 in. tailpieces to basket strainers; ensure proper use of washers for leak-free use

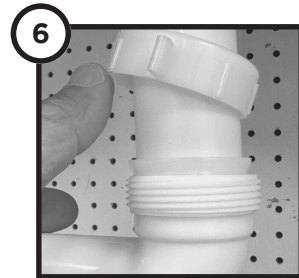

6 Once tailpieces are firmly in place, proceed to connect them to PVC continue waste system

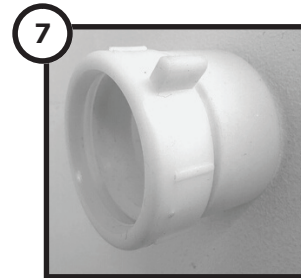

7 Install PVC Wall P-trap adapter for fast installation

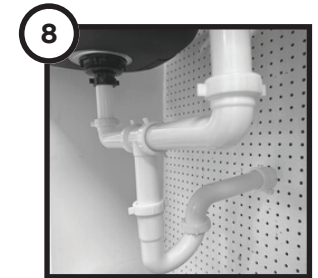

8 Finally, connect PVC continue waste to PVC P-trap. Carefully connect P-Trap to Wall Adapter